

Vermont WIC

Xerox WIC Retailer Manual

WIC Retailer Help Desk
1-855-769-8857



Table of Contents

Introduction.....	2
I. How to Use this Manual.....	3
Format and Organization.....	3
II. Overview of the WIC Program.....	4
III. The WIC Electronic Benefit Transfer Program	5
WIC Program Purpose.....	5
How Xerox Supports the Retailer	5
IV. WIC Benefit Delivery Guidelines	6
V. Vermont WIC card & Personal Identification Number (PIN)	7
The Vermont WIC card	7
Personal Identification Number (PIN).....	7
VI. WIC Point-of-Sale (POS) Equipment	8
Combination Terminal / Printer	8
PIN Pad	8
Bar Code Scanner	9
VII. Xerox Retailer Help Desk.....	10
Confidentiality	10
VIII. Signage, Supplies, and Record Retention	11
Lane Signage.....	11
Window Decals.....	11
Supplies	11
Record Retention.....	12
IX. Automated Clearing House (ACH)	13
What is ACH?	13
When are ACH Credits (Settlement) Available at the Bank?	13
How Will a Retailer Know if the Amount of the ACH Credit is Correct? ..	13
What if a Retailer Changes Banks, Bank Account Numbers, or Third Party Processors?	14

- X. Maintenance and Troubleshooting WIC POS Terminals 15**
 - Daily Preparation 15
 - Printing on the VeriFone Vx 570 15
 - About Thermal Printer Paper 15
 - Installing a Paper Roll..... 16
 - Cleaning the Terminal 17
 - Cleaning the Printer 17
 - Terminal Display Does Not Show Correct or Readable Information 18
 - Terminal Does Not Dial Out 18
 - Printer Does Not Print..... 18
 - Printer Paper Jam..... 18
 - PIN Pad Does Not Work 19
 - Bar Code Scanner Does Not Work..... 19
 - Terminal Key Pad Does Not Work 19
 - Terminal Transactions Do Not Work 19
 - Error Messages 21

- XI. VeriFone Vx570 Features 28**

- XII. Retailer Terminal Administrative Functions 29**
 - Add Clerk 29
 - Delete Clerk 31
 - Change Clerk Password 33
 - Load WIC Price(s) 35
 - Change WIC Price(s)..... 36
 - Clerk Totals Report 37
 - Terminal Totals Report 39
 - Retailer Totals Report 41
 - Shift Totals Report 43
 - Reset Shift Totals..... 44
 - Reprint Last Receipt 45
 - Set/Reset Training Mode 46
 - Set Print Mode..... 48
 - Print and Reset Receipt Copies..... 49
 - Print Terminal Configuration 50
 - Communication Test 51

XIII. WIC POS Terminal Transactions.....52

- Logon Terminal/Clerk..... 52
- Logon Terminal/Clerk Receipt..... 53
- Logoff Clerk/Terminal..... 54
- Logoff Clerk/Terminal Receipt..... 55
- WIC Purchase SMART Keys 56
- WIC Purchase..... 57
- WIC Purchase Receipt 60
- WIC Balance Inquiry 61
- Balance Inquiry Receipt..... 62

XIV. Glossary.....63

Introduction

Welcome to the Women, Infants and Children (WIC) Electronic Benefits Transfer Program!

The Vermont WIC Program has contracted with Xerox State and Local Solutions to implement and deliver an electronic method for WIC Participants to access their WIC food benefits in grocery stores through Point-Of-Sale (POS) devices. This new delivery system is known as “eWIC”.

eWIC has many benefits to Retailers, cardholders and the government. These benefits include secure and convenient benefits for the cardholder, reduced opportunity for fraud, an automated redemption process for Retailers, and reimbursement/settlement for WIC transactions within two business days.

Xerox has designed this manual to provide the information needed to understand and receive WIC payments for food benefits provided to eligible participants. All Retailers who process WIC transactions using Xerox POS equipment will receive this manual. Retailers are required to follow the procedures presented in this manual.

I. How to Use this Manual

Format and Organization

This manual is designed to provide needed information to Retailers so that they are able to participate in and understand WIC benefits. The manual is divided into two primary sections. The first section contains WIC benefit guidelines and procedures and the second section contains WIC terminal transaction information. Also included is a glossary, which defines various terms and/or phrases used in this manual.

Retailers and their designated employees are encouraged to read the Xerox WIC Retailer Manual to become familiar with WIC guidelines and procedures.

II. Overview of the WIC Program

The Special Supplemental Nutrition Program for Women, Infants and Children (WIC) was created in 1972 as a two-year pilot program during a time of public concern about malnutrition among low-income mothers and children. The program was established as a permanent program in 1975. WIC is administered by the United States Department of Agriculture (USDA) Food and Nutrition Service (FNS). The program is available in each State, the District of Columbia, 33 Indian Tribal Organizations, Puerto Rico, the Virgin Islands, American Samoa, and Guam.

The target population for WIC services includes specific categories of low-income women, infants and children, who meet income and residency guidelines and who have a nutritional risk.

WIC is not an entitlement program; it is a Federal grant program with a specific amount of money made available annually to each state agency or other administering unit. The number of participants that can be served each year depends on the annual appropriation and the cost of operating the program. WIC funds are to be used for supplemental foods, nutrition counseling and education and administrative costs.

WIC benefits are provided free of charge to the participant and include a specific supplemental food package. Other WIC benefits include nutrition education and referrals to other health care and social service programs.

III. The WIC Electronic Benefit Transfer Program

WIC Program Purpose

The purpose of eWIC is to provide a more efficient system for the distribution of WIC food benefits. The goal is to use the existing electronic infrastructure to deliver food benefits quickly and safely to WIC participants.

How Xerox Supports the Retailer

Xerox, State and Local Solutions, the prime WIC contractor to the state agency, provides the necessary training and assistance to all Retailers using Xerox-provided POS equipment in the WIC program. WIC authorized Retailers using Xerox-provided POS equipment must sign a WIC Retailer Agreement with Xerox, which is in addition to any agreement required by the State of Vermont.

Xerox provides a toll free WIC Retailer Help Desk number that is dedicated to only Vermont WIC retailers and is available 24 hours a day, 7 days a week. The WIC Retailer Help Desk number is: 1-855-769-8857.

Retailers using the Xerox-provided POS equipment should call the WIC Retailer Help Desk number 1-855-769-8857 to:

- Obtain service assistance for Xerox-provided POS equipment,
- Clarify WIC Program guidelines and procedures relative to store WIC transaction processing,
- Address training issues,
- Provide assistance with adjustment request and resolution of settlement out-of-balance conditions,
- Obtain signage and supplies.

Xerox provides a toll free cardholder Customer Service Help Desk number that is dedicated to only Vermont WIC cardholders and is available 24 hours a day, 7 days a week.

IV. WIC Benefit Delivery Guidelines

The following guidelines apply to all Retailers who are authorized by the state agency to participate in the WIC Program.

- a) A valid Vermont WIC Card (card must be physically present) and PIN must be used at the time of purchase in order for the cardholder to purchase their WIC food items.
- b) Retailers may not ask for or enter a cardholder's Personal Identification Number (PIN). A cardholder must enter his/her own PIN.
- c) Retailers must place an WIC window decal in the storefront window or entrance door to inform cardholders that they can use their Vermont WIC card at that store location.
- d) If WIC transactions are limited to certain lanes, each Retailer is required to display signage indicating where WIC transactions can be completed in the store. Lanes cannot be exclusively WIC and in addition to the WIC lane decal, must include signage for other tenders accepted. If all lanes are capable of processing WIC transactions, lane signage is not required.
- e) Retailers must submit an Xerox Retailer Settlement Authorization Form for an WIC settlement bank account change to Xerox at least 14 calendar days prior to the new account effective date.
- f) All WIC purchases are for the quantities of the specific WIC food items issued to WIC participants or their corresponding dollar amount. It is prohibited by federal law to provide cash back or change to the cardholder for any WIC purchases.
- g) At the completion of a WIC transaction, Retailers must provide a printed receipt for the quantities of WIC food items purchased, and displaying the ending balance of the WIC account.
- h) Retailers must return all Xerox POS equipment if and when it no longer participates in the WIC Program. Retailers must call the WIC Retailer Help Desk for procedures to return equipment.
- i) Buy one, get one free transactions should be scanned into the store's system but only one item of the items being purchased should be scanned into the WIC POS system. If accepted for non-WIC customers, retailers are required to process store and manufacturer cents-off coupons.
- j) Retailers must scan the UPC code that is affixed to the actual item being purchased by the WIC participant.
- k) Enter PLU 4469 for all fresh fruits and vegetables, regardless of the actual PLU assigned to the product

NOTE: At no time may Retailers exchange food benefits for cash or food items not in the cardholder's WIC account.

V. Vermont WIC Card & Personal Identification Number (PIN)

The Vermont WIC Card

The Vermont WIC card allows a cardholder to purchase WIC food benefits at authorized WIC Retailers through electronic Point-of-Sale (POS) terminals. A cardholder can obtain their current food balance by:

- Referring to their last store receipt,
- Accessing the cardholder portal; www.ebt.acs-inc.com
- Calling Xerox WIC Customer Service at 1-855-769-8857
- Using the Vermont WIC text messaging service, or
- Performing a Balance Inquiry transaction on a Retailer's WIC terminal.

The Vermont WIC card is a plastic card the same size as other credit, debit, or ATM cards. The cardholder's Primary Account Number (PAN) is located on the face of the card. The back of the card contains a magnetic stripe that contains the information needed to process an WIC transaction through the POS terminal. The cardholder uses the Vermont WIC card for as long as they are eligible for WIC benefits. Therefore, the WIC participant uses the same Vermont WIC card month after month.

In the event that an Vermont WIC card is found by or turned into a retailer, the WIC card should be mailed back to the Vermont Department of Health-WIC Program, P.O. Box 70, Burlington, VT 05402-0070.

Personal Identification Number (PIN)

The PIN is a four-digit confidential number used in conjunction with the Vermont WIC card to ensure that only an authorized person accesses the participant's account. The system considers a correct entry of a PIN to be a cardholder's electronic signature. The Retailer is not responsible for verifying identity on the back of the Vermont WIC card for POS transactions. Thus, the Retailer assumes no liability for performing an WIC transaction as long as the cardholder enters a correct PIN and the Xerox WIC system authorizes the transaction. If a cardholder enters an incorrect PIN three consecutive times, his or her card is locked. The PIN is reset at 12:01 a.m. (one minute past midnight) after the last invalid PIN attempt. If the cardholder does not remember the PIN, the cardholder should call the customer service number on the back of the card for instructions. If a card is lost, stolen or damaged, the cardholder must report it immediately to Xerox WIC Customer Service or their local clinic.

VI. WIC Point-of-Sale (POS) Equipment

Combination Terminal / Printer

The POS terminal is an electronic transaction device capable of data input, processing and high-speed transmittal of WIC transactions. The terminal communicates with a host computer via a standard telephone line or wired high-speed broadband connection to obtain authorizations for WIC transactions and other necessary Retailer administrative functions, such as setting and/or changing Clerk ID or passwords and printing Retailer reports.

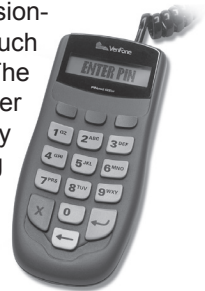


The VeriFone Vx 570 terminal consists of a magnetic-stripe card reader, a multi-line read-out screen for displaying data input prompts and messages, and a thermal paper printer for receipts. All cardholder transactions require the entry of the card number by swipe or manual entry, the cardholder entering a PIN number, and the products being purchased to be scanned. A complete step-by-step discussion of every transaction and administrative function can be found on pages 31-54 of this manual.

NOTE: The “WIC POS Terminal Transactions” section provides instructions for only those Retailers operating Xerox POS equipment.

PIN Pad

The PIN pad is connected to the terminal by a coiled expansion-cord that allows participants to enter their 4-digit PIN in as much privacy as possible during checkout in the Retailer’s store. The PIN pad provides a visual response in the form of a star (*) after each entry is made on the pad; for security, the actual entry will not be visible. The PIN pad is a secure device providing protection for the participant’s PIN from the instant each number is pressed throughout the entire transaction. Proper matching of the participant entered PIN is necessary to complete WIC transactions.



Bar Code Scanner

The hand held bar code scanner is connected to the terminal by a four-foot cord that allows the Retailer to scan the UPC bar codes of the items being purchased. The scanner utilizes linear imaging technology that delivers exceptional reading performance providing greater range and reading distance than standard lasers for faster, easier point-of-sale scanning. (Entry of the generic PLU 4469 to be used for WIC-eligible fresh fruits and vegetables is described on page 6.)



VII. Xerox Retailer Help Desk

The WIC Retailer Help Desk is available 24 hours a day, 7 days a week. All Retailers should call the WIC Retailer Help Desk at 1-855-769-8857 for information including:

- Ordering supplies,
- Settlement issues and questions,
- Correction or adjustment requests,
- Equipment failure and/or other POS related problems and issues,
- Returning equipment, or
- Other general WIC Retailer related questions.

Confidentiality

All information about participants and WIC transactions is confidential. Retailers may not give out information such as Vermont WIC card numbers, purchase amounts, or benefits balance to anyone not associated with the administration of WIC benefits. The confidentiality section in the Xerox Retailer Agreement reiterates this requirement.

If an investigator, auditor, or police official requests WIC information, the Retailer must ask the official for identification. **The Retailer must then call the WIC Retailer Help Desk for further instructions. The state agency in charge of WIC determines if information is to be released.**

VIII. Signage, Supplies, and Record Retention

Lane Signage

Each Retailer is required to display signage indicating where WIC transactions can be completed in the store. In multi-lane stores, each check-out lane processing WIC transactions must have signage posted directing WIC participants to lanes that will be able to process WIC transactions. If all lanes are capable of processing WIC transactions, lane signage is not required. Vermont WIC program will provide one sign for each lane equipped with Xerox POS equipment. Additional signs may be ordered by calling the WIC Retailer Help Desk.

Window Decals

Vermont WIC program provides Retailers with an WIC window decal that must be placed on either the storefront door or window to inform cardholders that the store accepts Vermont WIC cards. One decal measures approximately 4 ½" x 6". Retailers should contact the state for replacement decals.

Supplies

Xerox provides an initial supply of printer paper rolls, a Vermont WIC Quick Reference Guide, an Vermont WIC Retailer Manual, and signage for Retailers using Xerox equipment. Retailers may re-order additional supplies, except for printer paper rolls, by calling the WIC Retailer Help Desk as needed.

Retailers must purchase subsequent printer paper rolls from any general office supply store as needed. The VeriFone Vx 570 uses the following types of paper:

- CRM0039 - High-grade thermal paper, 2-1/4 inch (57 mm) wide roll
- CRM0027 - Medium-grade thermal paper, 2-1/4 inch (57 mm) wide roll

Retailers are reimbursed for the POS paper associated with WIC transactions. Supply reimbursement is sent on a quarterly basis through an ACH deposit to the bank account indicated on the Retailer's Xerox Retailer Settlement Authorization Form. The amount of reimbursement is based on the number of WIC transactions and not on the amount of paper purchased.

Record Retention

Retailers must maintain WIC-related records for a period of 12 months following the redemption of WIC food benefits. For WIC Retailers, relevant records include:

- POS terminal transaction receipts

Retailers must make these records available for an audit upon request of representatives of Xerox or authorized state agency and federal government agencies during the Retailer's normal business hours. In addition, upon written notice from Xerox and/or the state agency, a Retailer must deliver the requested WIC-related documents for review within 14 business days.

IX. Automated Clearing House (ACH)

What is ACH?

ACH stands for Automated Clearing House. It is a facility that processes debits and credits between financial institutions electronically. In the WIC Program, the ACH will process transactions that occur between Xerox and Retailers. Funds are settled directly to a Retailer's designated bank account via ACH for all approved transactions.

When are ACH Credits (Settlement) Available at the Bank?

The host system generates an ACH credit immediately following system cut-off each afternoon. The Xerox WIC system has a cut-off time of 10:30 a.m. Central Standard Time. Retailers have the option of using the Xerox host system cut-off time or may designate a terminal cut-off time of their own choosing in the Xerox Retailer Agreement or by calling the WIC Retailer Help Desk. If the selected cut-off time is after the host system cut-off time, the ACH credit is sent the next business day. Funds are sent to the Retailer's bank on a daily basis and are available based upon the individual bank's rules.

Example: If the Retailer's cut-off is on or before 10:30 a.m. CST, payment for all WIC transactions for that business day will be available on the following business day. If the Retailer's cut-off is after 12:00 p.m. EST, payment for all WIC transactions will be available in two (2) business days.

How Will a Retailer Know if the Amount of the ACH Credit is Correct?

The credit that the Retailer receives through ACH corresponds to the WIC transaction total for the Retailer's business day. If the Retailer's designated cut-off time is after 10:30 a.m. Central Standard Time, the ACH credit amount is for the prior business day. If the Retailer's cut-off time is before 10:30 a.m. Central Standard Time, the ACH credit amount is for the current business day. Individual bank guidelines also determine when an ACH credit/debit is applied. This could delay an ACH reimbursement by an additional day after the respective business day.

If a reimbursement credit does not arrive at a Retailer's bank within three banking days of the respective retail business day, the Retailer should first contact their bank to determine if all ACH credits have been posted for that day. The Retailer can then call the WIC Retailer Help Desk. A representative will research and resolve the problem.

What if a Retailer Changes Banks, Bank Account Numbers, or Third Party Processors?

It is critical that the Xerox WIC host system has correct and up-to-date banking information for all WIC Retailers. If a bank account is not current, the Retailer cannot be paid. Retailers must call the WIC Retailer Help Desk with any bank account changes.

If a Retailer wants to change the designated bank account that ACH settlement is sent to, the Retailer must notify the WIC Retailer Help Desk within at least 14 calendar days of the bank change request. A Xerox Retailer Settlement Authorization Form will be mailed to the Retailer which must be completed and mailed back to Xerox before the bank account can be changed.

X. Maintenance and Troubleshooting WIC POS Terminals

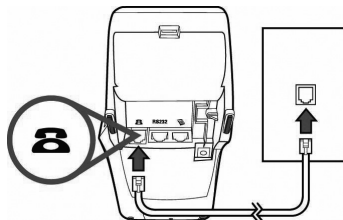
This section provides troubleshooting guidelines to help with installation and configuration of the VeriFone Vx 570 terminal. If during normal, day-to-day operation of the VeriFone Vx 570 terminal, minor malfunctions occur, please read through these troubleshooting examples. This section also contains typical examples of malfunctions that can occur while operating the WIC POS equipment and lists steps to take to resolve them.

Daily Preparation

Check the POS terminal every day so it is ready when the store opens.

1. Check all cable connections on the back of the terminal including the PIN pad, Bar Code Scanner, telephone line and power pack cable. A moving arrow should appear on the PIN pad.
2. Make sure the terminal displays initial screen prompts.
3. Check the printer's paper supply. Replace if low.

Printing on the VeriFone Vx 570



A fast, quiet thermal printer is built in to the VeriFone Vx 570. Because the printer receives power directly from the terminal, there are no additional cables to connect.

About Thermal Printer Paper

The VeriFone Vx 570 can use either of the following types of replacement paper:

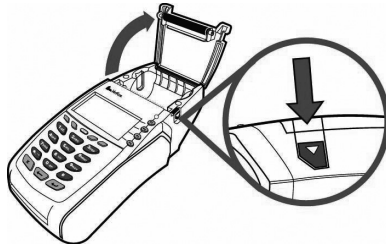
- CRM0039 - High-grade thermal paper, 2-1/4 inch (57 mm) wide roll
- CRM0027 - Medium-grade thermal paper, 2-1/4 inch (57 mm) wide roll

The VeriFone Vx 570 printer uses single-ply, thermal-sensitive roll paper that is 2-1/4 inches (57 millimeters) wide and about 82 feet (25 meters) long. Before you can process transactions, you must load a paper roll into the printer unit. This procedure is described in this section.

CAUTION: Because impact, friction, temperature, humidity, light, and oil affect the coloring and storage characteristics of thermal paper, handle this type of paper carefully. Never load a roll of paper that has any folds, wrinkles, tears, or holes at edges or in the printing area. For best results, cut the leading edge of the paper, instead of tearing it, before feeding it into the printer.

Installing a Paper Roll

1. Turn on the terminal. The green LED indicator will blink on and off, indicating that the printer needs paper.
2. Press the button on the side of the terminal to unlatch the paper roll cover, then rotate the cover up and back (as shown below).



3. Remove partial rolls of paper in the printer tray by lifting up.
4. Loosen the glued leading edge of the paper or remove the protective strip from the new roll of paper and cut a straight edge across its leading end.
5. Hold the roll so the paper feeds from the bottom of the roll.
6. Drop the paper roll into the printer tray, leaving about two inches of the paper sticking up past the serrated metal tear strip (as shown below).



7. Close the paper roll cover by gently pressing directly on the cover until it clicks shut. Allow a small amount of paper to extend outside the cover (as shown below). **CAUTION:** To prevent damage to the print roller on the paper roll cover, always close the cover by gently pressing down on the paper roll cover.

NOTE: If the terminal runs out of paper during a WIC transaction, finish installing paper roll as described above, and follow instructions on page 59 to “Reprint Last Receipt”.



Cleaning the Terminal

To properly maintain a VeriFone Vx 570 terminal, clean it regularly to remove dust, accumulations of dirt or grease, and fingerprints.

To clean the terminal, use a clean cloth slightly dampened with water and a drop or two of mild soap. For stubborn stains, use alcohol or an alcohol-based cleaner.

CAUTION: Never use thinner, trichloroethylene, or ketone-based solvents - they may deteriorate plastic or rubber parts.

Do not spray cleaners or other solutions directly onto the keypad or LCD screen.

Cleaning the Printer

Every few months, check and thoroughly clean the printer:

- Be sure the terminal is connected to a power source.
- Open the roll paper cover. (See *Installing a Paper Roll*)
- Lift out the paper roll from the paper roll cradle, if necessary.
- Tip the terminal and tap it to remove any dirt, dust, or bits of paper present in the printer compartment.
- Re-install the paper roll, or install a new roll. (See *Installing a Paper Roll*.)

Terminal Display Does Not Show Correct or Readable Information

- Check all cable connections and verify that each cable line is properly connected. Sometimes disconnecting and then re-connecting the power cable will solve the problem.
- Check the electrical outlet. The plugs from the power pack may be loose or the outlet may not be supplying power.
- If the problem persists, contact the WIC Retailer Help Desk.

Terminal Does Not Dial Out

NOTE: If your Xerox WIC terminal is connected to a High Speed Broadband Service and you are experiencing any communication connection issues, please contact the WIC Retailer Help Desk.

If the terminal does not dial out:

- Check the telephone line connections.
- Disconnect the terminal's telephone line from the wall jack, plug a working telephone into the same wall jack, and listen for dial tone.
- If there is no dial tone, call the telephone company to report the problem.
- If there is a dial tone, replace the telephone cable that connects the terminal to the wall jack with a cable you know is working correctly.
- If the problem persists, contact the WIC Retailer Help Desk.

Printer Does Not Print

If the printer does not work properly:

- Check all terminal power connections. The green power-on indicator light must be **on**.
- Check that the paper roll cover is properly latched.
- If the green power-on indicator is blinking on and off, the printer is out of paper.
- Open the paper roll cover and install a new roll of printer paper.

Printer Paper Jam

If paper jams inside the printer:

- Press the button on the side of the terminal to unlatch the paper roll cover, then open the cover.
- Remove the damaged paper from the paper roll and clear the feed mechanism.
- Install a roll of printer paper as described in *Installing a Paper Roll*.
- If the problem persists, it may be due to poor paper quality. Install a new roll of higher-quality paper.

PIN pad Does Not Work

- Check all PIN pad cable connections.
- Check the PIN pad's display panel. When working properly, there should be an arrow scrolling right to left across the panel. Any other displayed message or blank screen indicates a broken PIN pad.
- If the problem persists, contact the WIC Retailer Help Desk.

Bar Code Scanner Does Not Work

- Check the Bar Code Scanner cable connections to the terminal.
- Check the electrical outlet. The plugs from the power pack may be loose or the outlet may not be supplying power.
- Scanner should be used at least 3 inches away from UPC bar codes.
- Check bar code. Scanner will only read up to 13 characters for a UPC.
- If the problem persists, contact the WIC Retailer Help Desk.

Terminal Key Pad Does Not Work

- Check all cable connections and verify that they are properly connected.
- Check the electrical outlet. The plugs from the power pack may be loose or the outlet may not be supplying power. Sometimes disconnecting and then reconnecting the power cable will solve the problem.
- Check the terminal's display panel. If it displays the wrong character or nothing at all when you press a key, please follow the steps outlined in "Terminal Display Does Not Show Correct or Readable Information."
- If pressing a function key does not perform the expected action, refer to the Retailer Terminal Administrative Functions in this manual.
- If the problem persists, contact the WIC Retailer Help Desk.

Terminal Transactions Do Not Work

There are several reasons why the terminal may not process transactions. Use the following steps to troubleshoot failures.

– The cause of the problem may be the card reader:

- Make sure you are swiping cards properly. With the VeriFone Vx570 card reader, the black magnetic stripe on the card should face downward and in, toward the keypad.
- Perform transactions with several different Vermont WIC cards, if available, to ensure the problem is not a defective card.
- Process the transaction by keying in the card number instead of using the card reader.

Vermont WIC

- If the key entered transaction works, contact the WIC Retailer Help Desk to have your terminal replaced.
- If the key entered transaction does not work, follow the instructions in “Terminal Does Not Dial Out”.
- If the problem persists, contact the WIC Retailer Help Desk.

NOTE: If the terminal routinely cannot scan cards, then the terminal may need to be replaced.

– **The cause of the problem may be a terminal software malfunction:**

- If the problem is in the terminal software, an *Error Message* will show up on the terminal's display panel and on the receipt.
- Look up the *Error Message* in the next section and follow the instructions.
- If there is no *Error Message* or if the problem persists, contact the Xerox Retailer Help Desk.

Error Messages

Code	Error Msg	Reason	Resolution
C1	Lost Comm With Host - or - Lost Conn With Host	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C2	No ENQ From Host	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C3	No Response From Host	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C4	Packet TX Error - or - Packet Send Error	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C5	Packet RX Error - or - Packet Recv Error	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C6	Unexpected Host EOT	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C8	No Modem Response	A communication error has occurred with the transfer of information between the store's equipment and the Host system resulting in a canceled transaction.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.

(Cont.)

Error Messages (cont'd)

Code	Error Msg	Reason	Resolution
C9	No Phone Line Avail	The terminal has not detected a phone line connection or dial tone from a telephone line which needs to be connected to the terminal.	Check and secure all telephone line connections to the terminal and wall jack. You should also check the telephone line by connecting a working telephone to the same wall jack and listening for a dial tone. If there is no dial tone, call your telephone company to have them check the wall jack and the phone line. If there is a dial tone, re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
C9	No Network Available	The LAN cable is not connected to the POS terminal or a local LAN is not detected by the POS terminal.	Check and secure all connections between the POS terminal, Server terminal, router, and any hubs that may be connected to the LAN network. Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
CB	No Answer From Dial	The terminal dialed the host phone number, but there was no answer from the host when it dialed.	Call the WIC Retailer Help Desk with the error code.
CB	Host Unreachable	The POS terminal or Server terminal was unable to establish a connection to the host system through the current network.	Call the WIC Retailer Help Desk with the error code.

Error Messages (cont'd)

Code	Error Msg	Reason	Resolution
CC	No Dial Tone	The terminal did not detect dial tone on the connected phone line and could not complete the call to the host system.	Check and secure all telephone line connections to the terminal and wall jack. Also, make sure the telephone line is not currently in use when attempting the transaction. If the terminal is shared with a telephone, hang up the voice call before attempting the transaction again. You should also check the telephone line by connecting a working telephone to the same wall jack and listening for a dial tone. If there is no dial tone, call your telephone company to have them check the wall jack and phone line. If there is a dial tone, re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
CD	Phone Line In Use	The terminal has detected that there is another communication device (telephone, fax machine) currently being used on the same phone line as the terminal.	Re-enter the transaction after the other communication device has completed its call or has been turned off.
E0	Invalid Term ID/ Pwd	The activation process for this terminal has not been completed or is invalid.	Call the WIC Retailer Help Desk with the error code.

(Cont.)

Error Messages (cont'd)

Code	Error Msg	Reason	Resolution
E1	Invalid User ID/ Pwd	A User (clerk or supervisor) has attempted to log-on to this terminal using an invalid User ID or password.	Confirm that the User ID and password is valid and has been set up on the terminal by the supervisor. If the User ID has not been set up, follow the “Add Clerk” procedures found in the Vermont WIC Retailer Policy and Procedures Manual to add a new User ID and password on the terminal. Re-attempt to Log On the terminal.
E3	Terminal Not Logged On	A clerk or supervisor User ID has not been logged into this terminal, or the terminal is out of synch with the Log On state on the Host system.	If the terminal screen reads “Swipe Card To Begin”, complete the Log Off procedure. Reattempt the Log On procedure using a valid clerk or supervisor ID and password. If the terminal screen reads “Terminal Logged Out”, re-attempt the Log On procedure using a valid clerk or supervisor ID.
E5	Call Retail Help Desk	The terminal's status in the Host system no longer matches the status at the local terminal.	Call the WIC Retailer Help Desk with the error code.
F2	Operator Aborted	The terminal operator/clerk canceled the transaction before it was transmitted.	Re-enter the transaction if desired.
F7	Out of Memory	The terminal's memory has been depleted due to the accumulation of stored Retailer Copies of transactions.	Follow the “Print and Reset Receipt Copies” procedure found in the Vermont WIC Retailer Policy and Procedures Manual to clear the terminal's memory.
FC	No WIC Benefits Avail	A purchase was attempted, but the client did not have WIC benefits available to use for the purchase.	Instruct the customer to verify their WIC benefit balance at a WIC Balance inquiry terminal.

Error Messages (cont'd)

Code	Error Msg	Reason	Resolution
S5	PIN Not Selected	A PIN number has not been assigned to this customer's Vermont WIC card.	Give the customer the error receipt and instruct the customer to call the Customer Service number located on the back of their Vermont WIC card to select a PIN number.
05	No WIC Retailer Number	The system is unable to process transactions using the current WIC Retailer number.	Call the WIC Retailer Help Desk.
05	WIC Retailer Not Found	The system is unable to process transactions using the current WIC Retailer number.	Call the WIC Retailer Help Desk.
05	Not a WIC Item	An item that was attempted to be purchased was not found as "WIC approved" in the UPC database.	Inform the customer that the specific item being purchased is not an authorized WIC item.
05	Invalid WIC Retailer	The WIC Merchant number used in this transaction is no longer valid.	Call the WIC Retailer Help Desk with the error code.
06	Invalid Transaction	The system is unable to process this transaction.	Call the WIC Retailer Help Desk with the error code.
12	Invalid Transaction Type	The system is unable to process this transaction.	Call the WIC Retailer Help Desk.
14	Invalid Card Number	The transaction did not complete processing and has been canceled due to an invalid card number.	Re-enter the transaction. If the problem persists, give the customer the receipt with the error code and instruct the customer to call the Customer Service number located on the back of their Vermont WIC card.
19	Re-Enter Transaction	This transaction did not complete processing and has been canceled.	Re-enter the transaction.
30	Format Error – Retry - or - Format Err NNN-Retry	This transaction did not complete processing and has been canceled.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.

(Cont.)

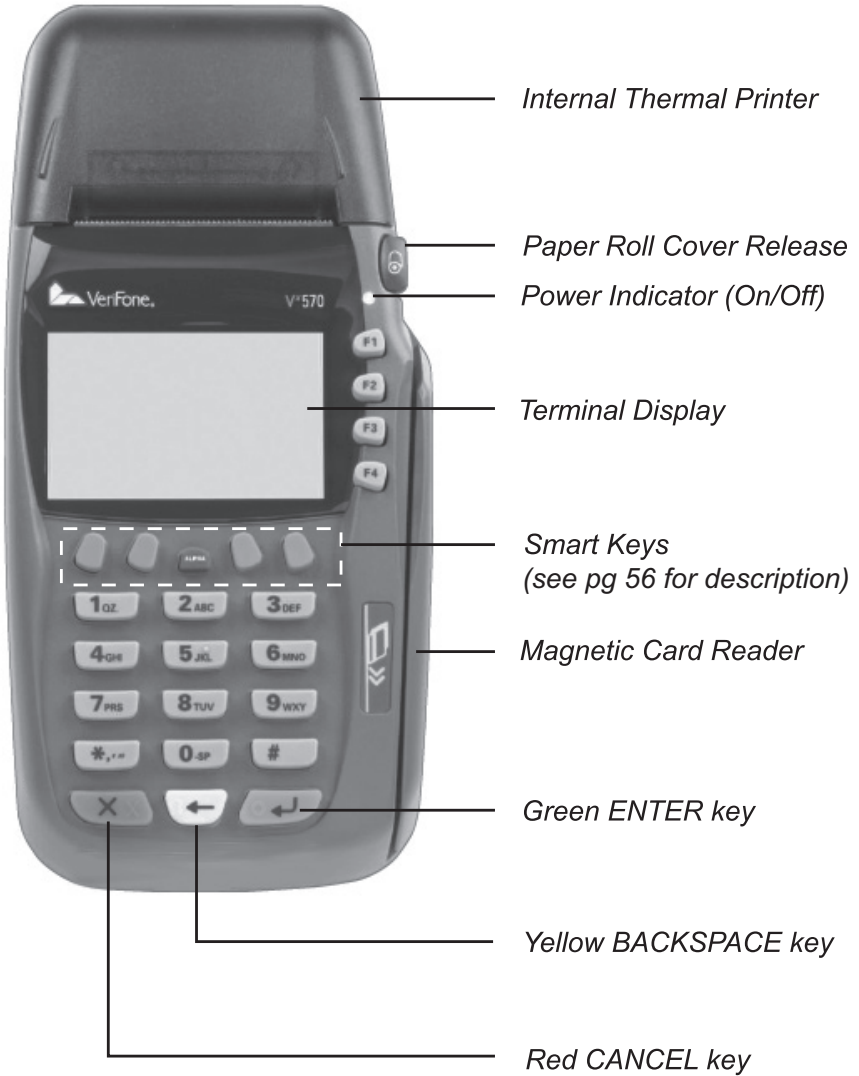
Error Messages (cont'd)

Code	Error Msg	Reason	Resolution
31	Invalid Card Type	The card used for this transaction is not a valid Vermont WIC card.	Inform the cardholder that the card being used must be a Vermont WIC Card. NOTE: Attempting to use a SNAP card on the WIC POS device will result in this error.
41	Call Client Help Desk	This transaction did not complete processing and has been canceled.	Give the customer the receipt with the error code and instruct the customer to call the Customer Service number located on the back of their Vermont WIC card.
42	Call Client Help Desk	This transaction did not complete processing and has been canceled.	Give the customer the receipt with the error code and instruct the Customer Service number located on the back of their Vermont WIC card.
43	Call Client Help Desk	This transaction did not complete processing and has been canceled.	Give the customer the receipt with the error code and instruct the customer to call the Customer Service number located on the back of their Vermont WIC card.
51	Insufficient Benefits	The amount of this transaction exceeds the WIC benefit balance in the customer's account.	Instruct the customer to verify their WIC benefit balance at either an in-lane POS terminal or at a WIC balance inquiry terminal.
55	Invalid PIN – Retry	The customer entered an invalid PIN number	Instruct the customer to re-enter their PIN number. Inform the customer that they are allowed only three attempts at entering their PIN. After the third attempt their account will be inaccessible until the next day. If the customer cannot remember their PIN, they should call the 800# on their Vermont WIC Card and follow the instructions given on the phone to select a new PIN.

Error Messages (cont'd)

Code	Error Msg	Reason	Resolution
56	Card Not Found	An incorrect card number was entered. This transaction did not initiate processing and was canceled.	Give the customer the receipt with the error code and instruct the customer to call the Customer Service number located on the back of their Vermont WIC card.
75	PIN Tries Exceeded	The customer has entered their PIN number incorrectly three times resulting in a canceled transaction. Their account is now inaccessible until the next day.	The PIN is re-set at 12:01AM on the day following the last invalid PIN prompt. Give the customer the error receipt. If the cardholder does not remember their PIN, he/she should call the Customer Service number on the back of their Vermont WIC card.
76	Key Synch Error – Retry	This transaction did not complete processing and has been canceled.	Re-enter the transaction. If the same Error Code is displayed, perform a “Log Off” and “Log On” procedure on the terminal and then re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
96	System Error – Retry	This transaction did not complete processing and has been canceled due to a Host System error.	Re-enter the transaction. If the problem persists, call the WIC Retailer Help Desk.
(XX)			NOTE: If you encounter an Error Code not found on this list, please call the WIC Retailer Help Desk with the error code for instructions. (XX will be the two digit error code).

XI. VeriFone Vx570 Features



XII. Retailer Terminal Administrative Functions

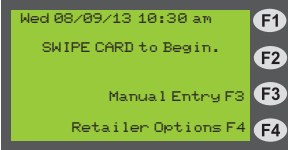
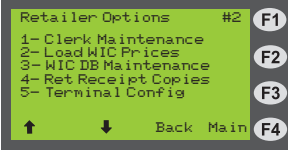
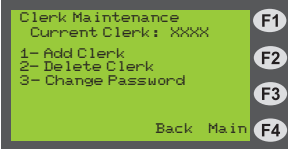
The chart to the right provides a high level overview of the different functions that can be performed by the “clerk” and “supervisor” roles. Specific details about each function are outlined in this section.

FUNCTION	CLERK	SUPERVISOR
Add Clerk		X
Delete Clerk		X
Change Clerk Password		X
Load WIC Prices	X	
Change WIC Prices	X	
Clerk Totals Report		X
Terminal Totals Report		X
Retailer Totals Report		X
Shift Totals Report	X	
Reset Shift Totals		X
Reprint Last Receipt	X	
Set/Reset Training Mode	X	
Set Print Mode	X	
Print and Reset Receipt Copies	X	
Print Terminal Configuration	X	
Communication Test	X	

Add Clerk

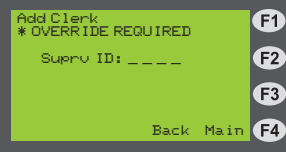
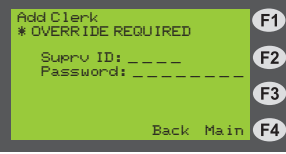
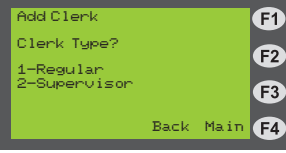
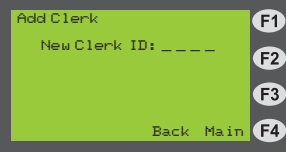
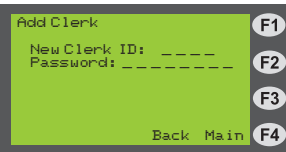
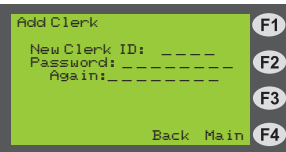
Purpose

Allows the retailer to add a new clerk/cashier, with their own password, to the online EBT host system’s list of terminal users. All User IDs must be 4 numeric digits. Passwords may contain 4 to 8 numeric digits.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Arrow down and select [1] Clerk Maintenance .
	Terminal displays currently logged on Clerk ID, if any. Select [1] Add Clerk .

(Cont.)

Add Clerk (cont'd)

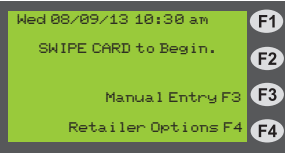
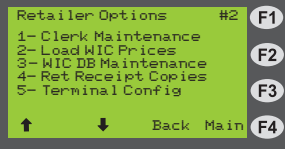
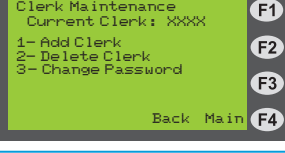
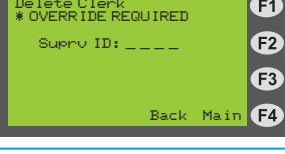
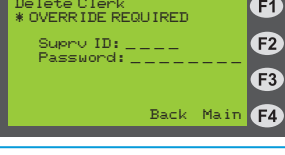
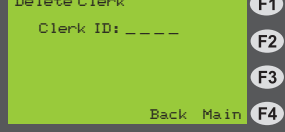
Terminal Screen	Action
	Enter Supervisor ID . Press green enter key.
	Enter Password . Press green enter key.
	Select Supervisor or Regular .
	Enter New Clerk ID . Press green enter key.
	Enter New Clerk Password . Press green enter key.
	Re-enter New Clerk Password . Press green enter key.

NOTE: When adding Clerk IDs and Passwords, you must specify if the added Clerk ID will be a Supervisor or Regular ID. Supervisor IDs are allowed to perform all “Retailer Administrative Options”. Regular IDs are restricted in the “Retailer Administrative Options” they may perform. Retailer may set up multiple Supervisor or Clerk IDs.

Delete Clerk

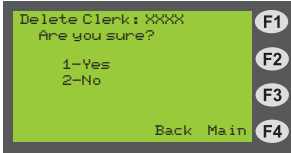
Purpose

Allows the retailer to delete a clerk and password from the online EBT host system's list of terminal users.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Arrow down and select [1] Clerk Maintenance .
	Terminal displays currently logged on Clerk ID, if any. Select [2] Delete Clerk .
	Enter Supervisor ID . Press green enter key.
	Enter Password . Press green enter key.
	Enter Clerk ID to be deleted. Press green enter key.

(Cont.)

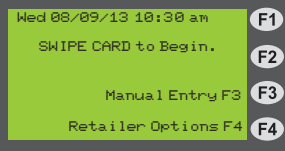
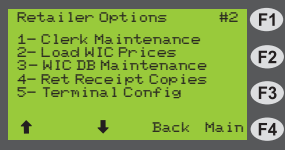
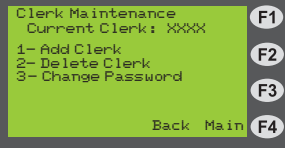
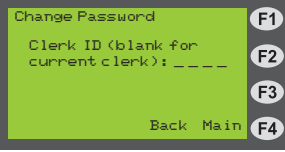
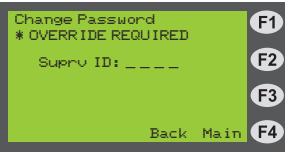
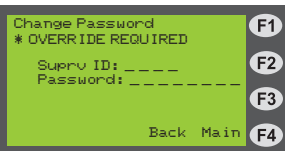
Delete Clerk (cont'd)

Terminal Screen	Action
	<p>F1 Terminal prompts if Clerk ID should be deleted.</p> <p>F2 Enter Yes or No.</p> <p>F3</p> <p>F4</p>

Change Clerk Password

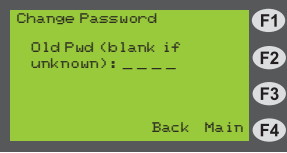
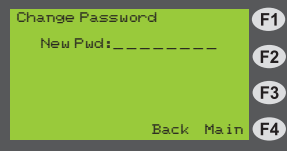
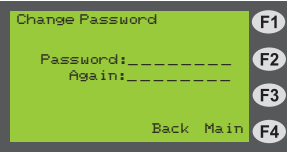
Purpose

Allows the clerk to change his/her logon password at the online EBT host system. A supervisor can override the password change prompts if the clerk has forgotten his/her current password.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Arrow down and select [1] Clerk Maintenance .
	Terminal displays currently logged on Clerk ID, if any. Select [3] Change Password .
	Enter Clerk ID . Press green enter key.
	Enter Supervisor ID . Press green enter key.
	Enter Supervisor Password . Press green enter key.

(Cont.)

Change Clerk Password (cont'd)

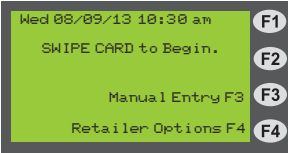
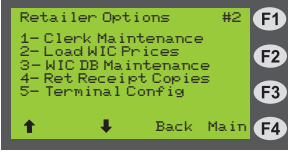
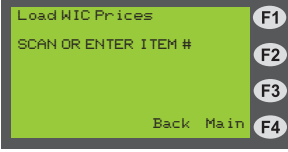
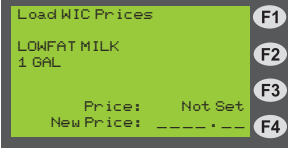
Terminal Screen	Action
 <p>Change Password Old Pwd (blank if unknown): _____ Back Main</p>	Enter Old Password . Press green enter key.
 <p>Change Password New Pwd: _____ Back Main</p>	Enter New Password . Press green enter key.
 <p>Change Password Password: _____ Again: _____ Back Main</p>	Re-enter New Password . Press green enter key.

Load WIC Price(s)

Purpose

Allows the retailer to use the POS device to load the store's WIC product price(s) into the WIC UPC database. This is an optional function and not required before performing a WIC purchase.

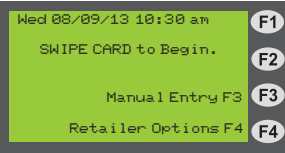
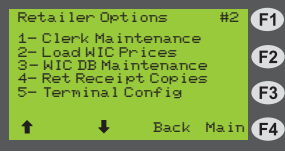
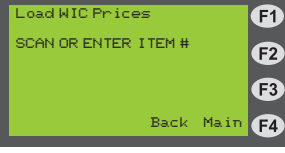
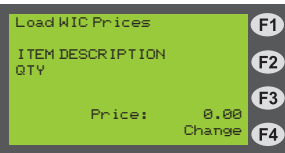
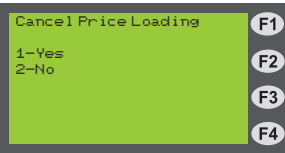
NOTE: UPC Database updating is a fully automated process and will not affect any existing UPC store prices. Only newly downloaded UPCs will prompt for a store price to be set.

Terminal Screen	Action
	<p>Press Retailer Options [F4].</p>
	<p>Arrow down and select [2] Load WIC Prices.</p>
	<p>Scan or Enter Item #.</p>
	<p>Enter price. Press Green Enter Key. Scan or Enter New Item # or press Red Cancel Key to return to previous screen.</p> <p>NOTE: If a price is not loaded in the POS at time of purchase, clerk may enter store price. The entry will carry forward as the permanent store price from that point.</p>

Change WIC Price(s)

Purpose

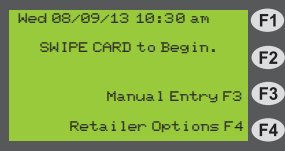
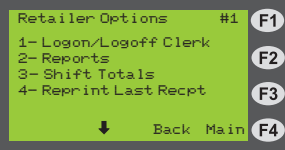
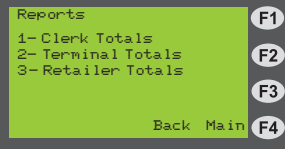
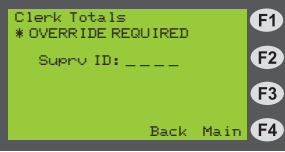
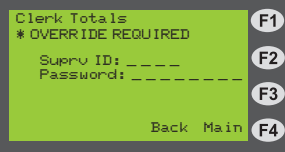
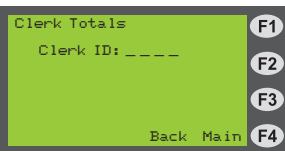
Allows the retailer to use the POS device to change the store's WIC product price(s) in the WIC UPC database.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Arrow down and select [2] Load WIC Prices .
	Scan or Enter Item #.
	Terminal displays item description and current price. Press button beneath Change and enter new price. Press green enter key.
	Scan or Enter next Item # or if finished press the red cancel key.
	Select Yes or No .

Clerk Totals Report

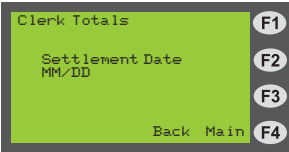

Purpose

Allows the retailer to print a report of the daily debits/credits for all WIC transactions totaled for a particular clerk. This report requires a supervisor ID and password.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Select [2] Reports .
	Select [1] Clerk Totals .
	Enter Supervisor ID . Press green enter key.
	Enter Password . Press green enter key.
	Enter Clerk ID . Press green enter key.

(Cont.)

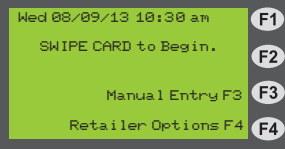
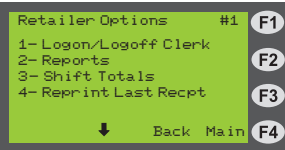
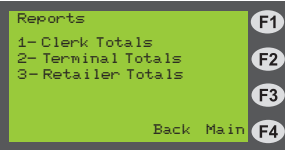
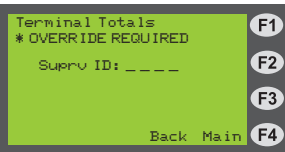
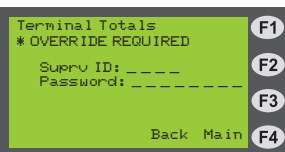
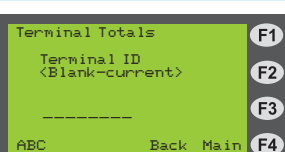
Clerk Totals Report (cont'd)

Terminal Screen	Action
 <p>The screenshot shows a green terminal screen with the text: "Clerk Totals", "Settlement Date", "MM/DD", and "Back Main" at the bottom. To the right of the screen are four function key icons labeled F1, F2, F3, and F4.</p>	<p>Enter Settlement Date (MM/DD). Press green enter key.</p> <p>NOTE: The date entered on this screen must be the “settlement” date for the business day you are requesting.</p>
 <p>The screenshot shows a green terminal screen with the text: "Report Request APPROVED", "Keep retailer receipt for records.", and "<<Press Any Key>>". To the right of the screen are four function key icons labeled F1, F2, F3, and F4.</p>	<p>Clerk Totals Report prints out. Keep receipt for records.</p>

Terminal Totals Report

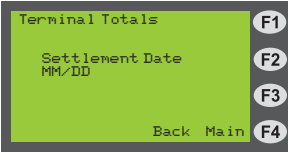

Purpose

Allows the retailer to print daily debits/credits for all WIC transactions accumulated at a particular terminal. This report requires a supervisor ID and password.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Select [2] Reports .
	Select [2] Terminal Totals .
	Enter Supervisor ID . Press green enter key.
	Enter Password . Press green enter key.
	Press green enter key for report on current terminal being used or enter Terminal ID number and press green enter key.

(Cont.)

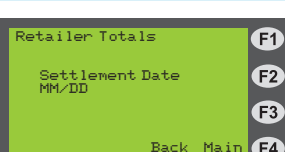
Terminal Totals Report (cont'd)

Terminal Screen	Action
 <p>The screenshot shows a green terminal screen with the text: "Terminal Totals", "Settlement Date", "MM/DD", "Back", and "Main". To the right of the screen are four function key icons labeled F1, F2, F3, and F4.</p>	Enter Settlement Date (MM/DD) . Press green enter key. NOTE: The date entered on this screen must be the “settlement” date for the business day you are requesting.
 <p>The screenshot shows a green terminal screen with the text: "Report Request", "APPROVED", "Keep retailer receipt for records.", and "<<Press Any Key>>". To the right of the screen are four function key icons labeled F1, F2, F3, and F4.</p>	Terminal Totals Report prints out. Keep receipt for records.

Retailer Totals Report


Purpose

Allows the retailer to print daily debits/credits for all WIC transactions accumulated for store's assigned Merchant ID number. This report requires supervisor ID and password.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Select [2] Reports .
	Select [3] Retailer Totals .
	Enter Supervisor ID . Press green enter key.
	Enter Password . Press green enter key.
	Enter Settlement Date (MM/DD) . Press green enter key. NOTE: The date entered on this screen must be the "settlement" date for the business day you are requesting.

(Cont.)

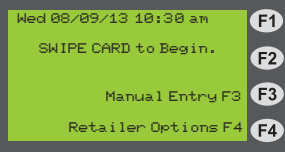
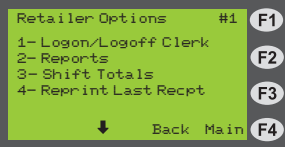
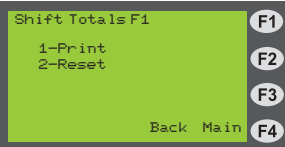
Retailer Totals Report (cont'd)

Terminal Screen	Action
 <p>Report Request APPROVED</p> <p>Keep retailer receipt for records. <<Press Any Key>></p> <p>F1 F2 F3 F4</p>	<p>Retailer Totals Report prints out. Keep receipt for records.</p>

Shift Totals Report

Purpose

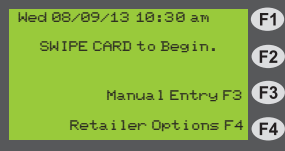
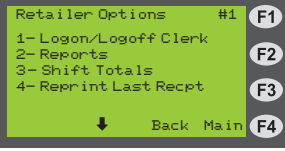
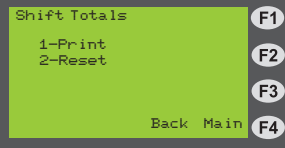
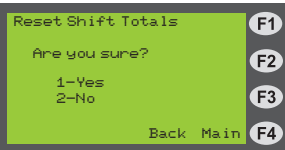
Allows the retailer to print accumulated shift totals since shift totals were last reset. Shift totals allow retailers a way to keep running totals from a particular point in time. This is especially useful for tracking summary totals for multiple clerks using the terminal throughout the day. Shift totals are stored locally on each POS terminal.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Select [3] Shift Totals .
	Select [1] Print .

Reset Shift Totals

Purpose

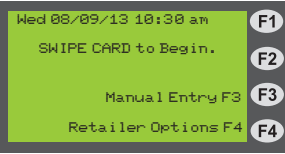
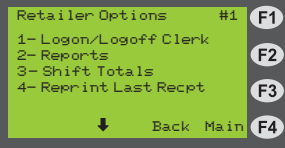
Allows the retailer to reset accumulated shift totals. Shift totals allow retailers a way to keep running totals from a particular point in time. This is especially useful for tracking summary totals for multiple clerks using the terminal throughout the day. Shift totals are stored locally on each POS terminal. A supervisor must be logged on to perform this function.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Select [3] Shift Totals .
	Select [2] Reset . Note: If current clerk is not a Supervisor, then the terminal displays an error message and returns to the Shift Total menu.
	Terminal prompts for confirmation. Select Yes or No .

Reprint Last Receipt

Purpose

Allows the clerk to reprint the most recent receipt the terminal printed (or attempted to print).

Terminal Screen	Action
 <p>Wed 08/09/13 10:38 am SWIPE CARD to Begin. Manual Entry F3 Retailer Options F4</p>	Press Retailer Options [F4] .
 <p>Retailer Options #1 1- Logon/Logoff Clerk 2- Reports 3- Shift Totals 4- Reprint Last Recpt ↓ Back Main</p>	Select [4] Reprint Last Receipt .

Set/Reset Training Mode

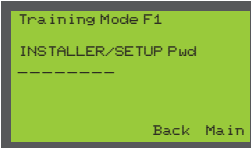
Purpose

Allows the retailer to enable/disable a local simulation mode at the terminal. Used for training or testing purposes to demonstrate POS functionality without sending transactions to the “live” EBT host system.

NOTE: Be sure the training mode is disabled before completing actual WIC transactions. Any transaction performed in training mode DOES NOT actually occur. No data is saved while in training mode and the retailer will be liable for any transactions that occur in training mode.

Terminal Screen	Action
	<p>Press Retailer Options [F4].</p>
	<p>Arrow down and select [5] Terminal Config.</p>
	<p>Arrow down and select [3] Training Mode.</p>
	<p>Terminal displays current status of Training Mode (ON or OFF) and prompts for confirmation to change mode.</p>

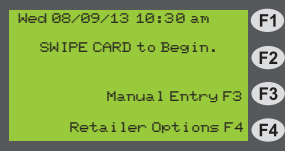
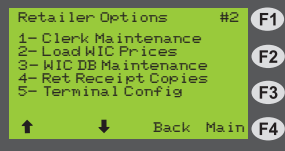
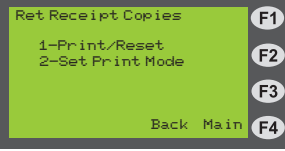
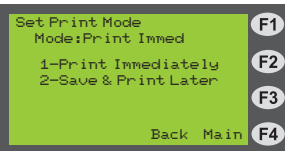
Set/Reset Training Mode (cont'd)

Terminal Screen	Action
	<p>F1 Terminal prompts for Installer/Setup password.</p> <p>F2 Enter Setup password: 753(alpha)80</p> <p>F3 Press green enter key.</p>
	<p>F4 Terminal changes the state of the Training Mode and prints a receipt showing the mode change.</p> <p>NOTE: If disabling Training Mode, terminal returns to configuration state it was in prior to entering Training Mode. If enabling Training Mode, the current terminal configuration is saved for later restoration.</p>

Set Print Mode

Purpose

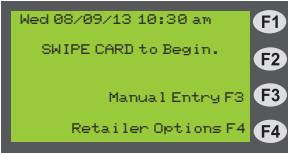
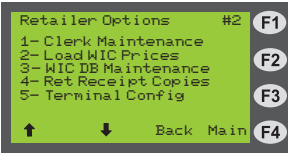
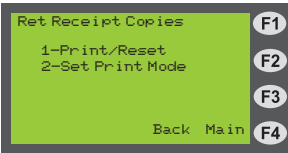
Allows the retailer to configure *how* and *when* POS terminal prints receipt copies. The VeriFone Vx570 is *automatically* configured to print retailer receipt copies immediately following a transaction. If Retailer prefers, the POS can be configured to print retailer receipt copies on one continuous piece of receipt tape at a specified time.

Terminal Screen	Action
 <p>Wed 08/09/13 18:38 am SWIPE CARD to Begin. Manual Entry F3 Retailer Options F4</p>	<p>Press Retailer Options [F4].</p>
 <p>Retailer Options #2 1- Clerk Maintenance 2- Load WIC Prices 3- WIC DB Maintenance 4- Ret Receipt Copies 5- Terminal Config ↑ ↓ Back Main</p>	<p>Arrow down and select [4] Ret Receipt Copies.</p>
 <p>Ret Receipt Copies 1-Print/Reset 2-Set Print Mode Back Main</p>	<p>Select [2] Set Print Mode. Terminal displays current print mode.</p>
 <p>Set Print Mode Mode:Print Immed 1-Print Immediately 2-Save & Print Later Back Main</p>	<p>Select Print Immediately or Save & Print Later. NOTE: If clerk selects Print Immediately when terminal was in Save and Print Later Mode and there are stored retailer copy receipts, an error message will be displayed. The screen prompts the clerk to first print and reset the retailer receipt copies before switching the mode. This message is followed by returning to the Ret Receipt Copies menu.</p>

Print and Reset Receipt Copies

Purpose

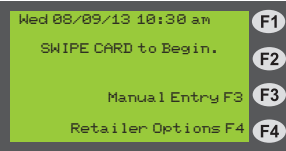
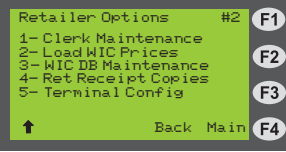
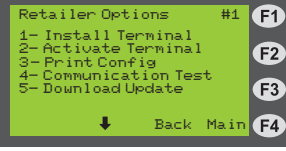
Allows the retailer to print out saved retailer copies of receipts and free up memory in the POS terminal by deleting the saved copies.

Terminal Screen	Action
 <p>Wed 08/09/13 10:30 am SWIPE CARD to Begin. Manual Entry F3 Retailer Options F4</p>	<p>Press Retailer Options [F4].</p>
 <p>Retailer Options #2 1- Clerk Maintenance 2- Load WIC Prices 3- WIC DB Maintenance 4- Ret Receipt Copies 5- Terminal Config ↑ ↓ Back Main</p>	<p>Arrow down and select [4] Ret Receipt Copies.</p>
 <p>Ret Receipt Copies 1-Print/Reset 2-Set Print Mode Back Main</p>	<p>Select [1] Print/Reset. Terminal displays number of copies stored in POS, if any.</p> <p>NOTE: If no problem is detected during printing, the terminal prompts the clerk to clear the retailer copies from memory after printing is completed. If a problem is detected, terminal prompts to reprint all copies again or restart printing from the receipt where problem was detected.</p>

Print Terminal Configuration

Purpose

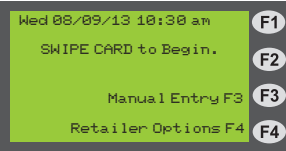
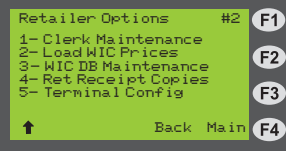
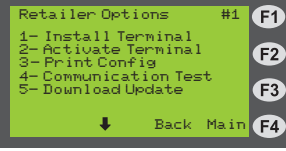
Allows the retailer to print all terminal configuration information for verification and trouble-shooting purposes.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Arrow down and select [5] Terminal Config .
	Select [3] Print Config .

Communication Test

Purpose

Allows the retailer to verify communication with the online EBT Host System.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Arrow down and select [5] Terminal Config.
	Select [4] Communication Test.

Download Updates

Purpose

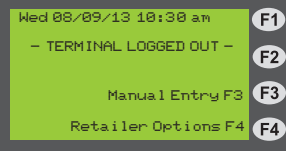
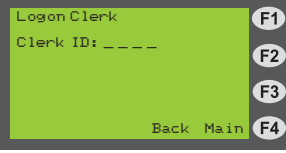
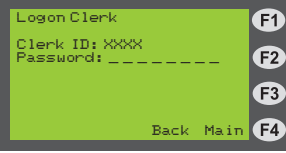

Not for Retailer Use. Download updates is for installers and POS technicians only.

XIII. WIC POS Terminal Transactions

Logon Terminal/Clerk

Purpose

The terminal must be logged on to perform WIC transactions.

Terminal Screen	Action
	<p>Press Logon Clerk [F3].</p>
	<p>Enter Clerk ID. Press green enter key. (Must be 4 numbers)</p>
	<p>Enter Clerk Password. Press green enter key. (Must be 4 to 8 numbers)</p>
	<p>Press any key to begin transactions.</p> <p>NOTE: Prints a receipt with a logon message Clerk XXXX is logged on.</p> <p>Terminal is logged on and ready for operation.</p>

Logon Terminal/Clerk Receipt

```
ABC Market
  Street 1
  Anywhere, OK 12345
  Ph: (123) 456-7890
  Proc #: 1234567

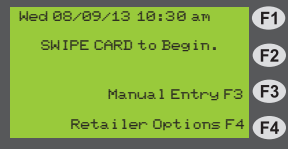
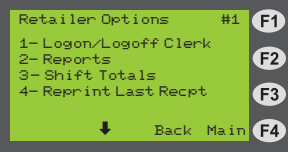
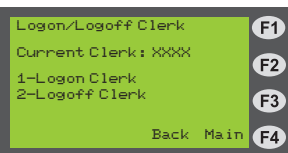

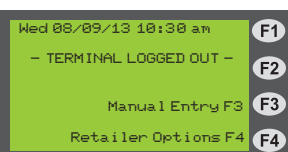
Term#: T0000001          11/01/13
Clerk: 1111              9:45:29am
-----
Clerk 1111 Logged On

Result:  Approved
Trace#:  000176-000009056385
-----
V2.99 020 176 000 000 000 000 000
=====
```

Logoff Clerk/Terminal

Purpose

Logs the current clerk off and prints clerk's totals since logon.

Terminal Screen	Action
	Press Retailer Options [F4] .
	Select [1] Logon/Logoff Clerk .
	Select [2] Logoff Clerk .
	Terminal prints clerk totals. Press any key. NOTE: Prints a receipt with a logoff message and clerk logoff totals.
	Terminal will not perform any transactions in this mode.

Logoff Clerk/Terminal Receipt

```

ABC Market
  Street 1
Anywhere, OK 12345
Ph: (123) 456-7890
Proc #: 1234567

Term#: T0000001          11/01/13
Clerk: 1111              11:45:29pm
-----
Clerk 1111 Logged Off

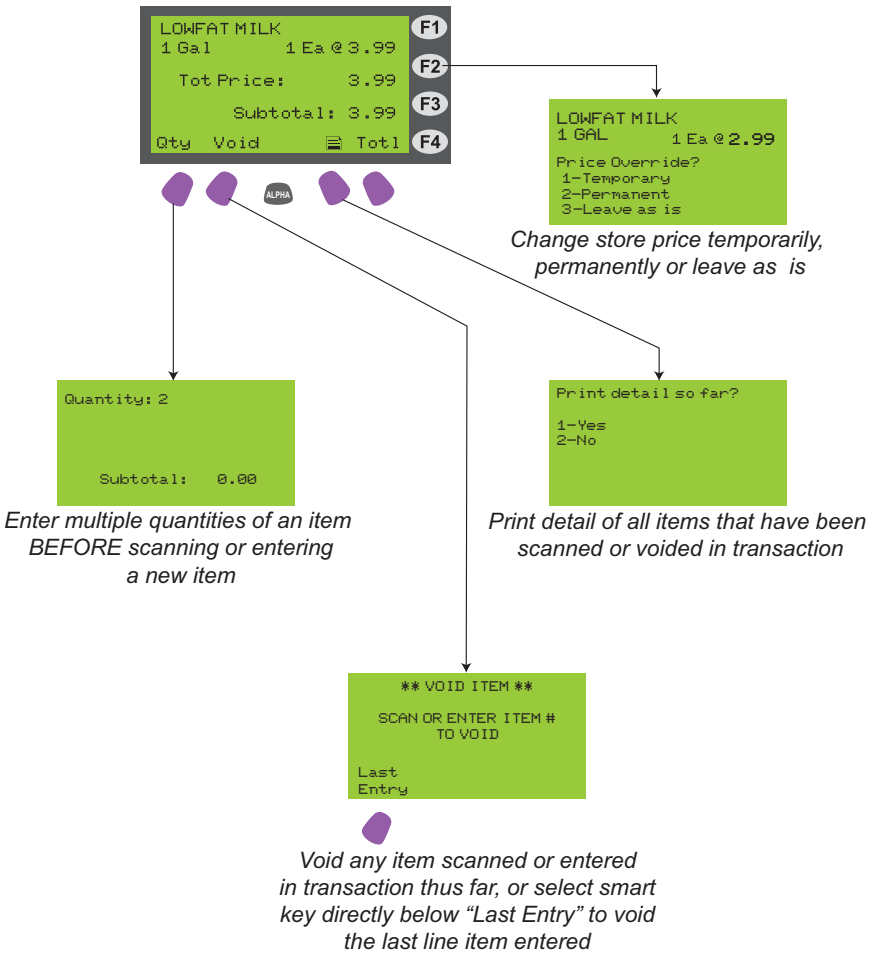
Logon Time : 11/01/11 09:26:29am
Logoff Time : 11/01/11 11:45:29pm

Logoff Totals:
WIC:
  Purchases          Count   Amount
                   -----
SUBTOTAL            2       25.35
WIC Bal Inq         1         --
TOTAL                3       25.35
-----
Result: Approved
Trace #: 000092-00000738057636
-----
V2.99 020 175 000 000 000 000 000
=====

```

WIC Purchase SMART Keys

WIC Purchase Smart Keys are provided to improve clerk efficiency for common activities required during an WIC purchase. These keys are for convenience and can be used by either clerks or supervisors.

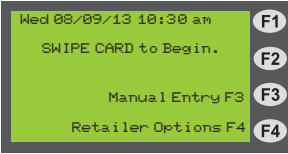
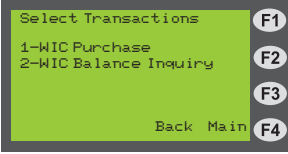
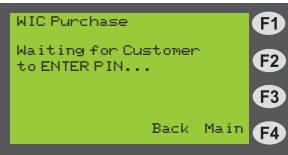
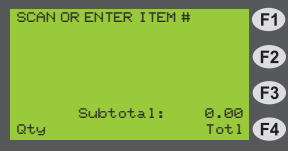

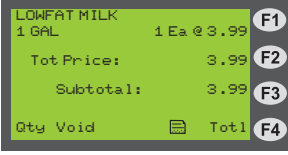



NOTE: While function keys F1, F3, and F4 may be used for other activities, they do not have SMART key functions.

WIC Purchase

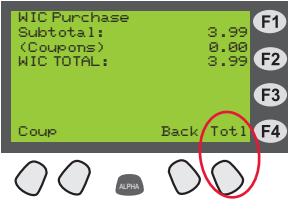
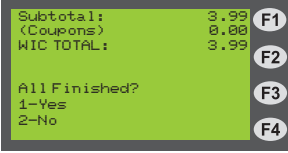
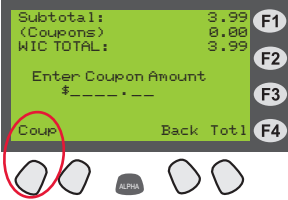
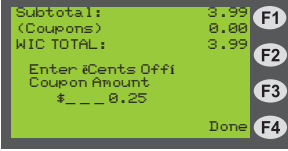
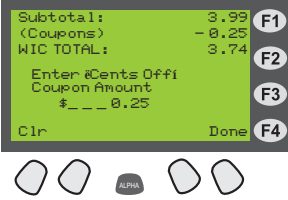
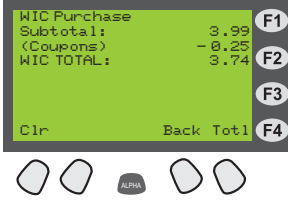
Purpose

Allows a participant to purchase WIC approved food using their WIC benefits account.

Terminal Screen	Action
	<p>Swipe Vermont WIC card or press Manual Entry to manually enter card number.</p> <p>NOTE: If not logged on as a supervisor, terminal will prompt for a supervisor password if manually entering a card number.</p>
	<p>Select [1] WIC Purchase.</p> <p>NOTE: The WIC POS device is not connected to the store cash register system and all items must be scanned separately into each system.</p>
	<p>Customer enters PIN on the PINpad and presses ENTER on PINpad.</p> <p>Screen will flash: Contacting Host...Waiting For Line... Dialing Primary...Waiting For Answer...</p> <p>Customer's WIC Benefits are now loaded in POS.</p>
 	<p>Scan or Enter Item # to be purchased.</p> <p>NOTE: Qty key must be pressed first to enter multiple quantities of an item and will always default back to one quantity.</p>
 	<p>Item Description and Price is displayed for 60 seconds. Price Override Smart Key may be selected during this time. <i>See page 56 for additional SMART keys available on this screen.</i></p> <p>Scan or Enter Item # of remaining WIC items. When finished, press Total key.</p>

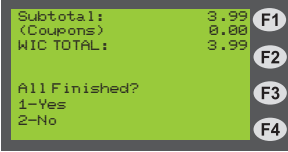

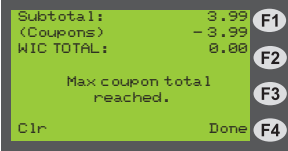
(Cont.)

WIC Purchase (cont'd)

Terminal Screen	Action
	<p>Subtotal amount is displayed.</p> <p>If NO Cents-Off Coupons are presented by cardholder, press TOTL button.</p> <p>DO NOT enter the total amount of the WIC items sold. Doing so will “zero out” the transaction and the store will not be paid.</p>
	<p>Terminal prompts if transaction is “All Finished”. Press [1] to complete WIC Purchase.</p>
	<p>OR</p> <p>If cardholder presents a Cents-Off Coupon(s), press the purple COUP button.</p>
	<p>Enter Cents-Off coupon amount and press green enter key.</p>
	<p>Enter next Cents-Off coupon amount or press DONE button to exit coupon function.</p> <p>NOTE: Purple CLR key may be pressed to delete a coupon amount entered, but doing so will zero out all coupon amounts entered thus far. All store/ cents-off coupons will then need to be re-entered.</p>
	<p>To complete the WIC Purchase transaction, press the purple TOTL button.</p>

(Cont.)

WIC Purchase (cont'd)

Terminal Screen	Action
 <p>Subtotal: 3.99 (Coupons) 0.00 WIC TOTAL: 3.99</p> <p>All Finished? 1-Yes 2-No</p>	<p>F1 Terminal prompts if transaction is “All Finished”. Press [1] to complete WIC Purchase.</p> <p>F2</p> <p>F3</p> <p>F4</p>
 <p>WIC Purchase APPROVED</p> <p>DISPENSE GOODS</p> <p>Give receipt to CUSTOMER.</p> <p><<Press Any Key>></p>	<p>F1 Terminal connects to host and prints a receipt indicating completion of the transaction. Terminal will then print Retailer copy of receipt. (Receipt will list cardholder’s remaining WIC benefits.)</p> <p>F2</p> <p>F3</p> <p>F4</p>
 <p>Subtotal: 3.99 (Coupons) - 3.99 WIC TOTAL: 0.00</p> <p>Max coupon total reached.</p> <p>Clr Done</p>	<p>F1 NOTE: Buy One, Get One Free transactions will be scanned in the store system, but NOT in the WIC POS system.</p> <p>F2 NOTE: If coupon amount(s) entered equal the subtotal, the terminal will display the message “Max coupon total reached” pictured here. Press Clr to re-set the coupon amount to zero and re-enter cents off amounts or press Done to exit coupon function.</p> <p>F3</p> <p>F4</p>

WIC Purchase Receipt

NOTE: If an item exceeds max price, it will be adjusted down to the max price, noted with an asterisk (*) and reflected in both the item price and WIC TOTAL amount. The WIC TOTAL is the reimbursement amount for the transaction.

```

                ABC Market
                Street 1
                Anywhere, OK 12345
                Ph: (123) 456-7890
                Proc #: 1234567

Term#: T0000001          03/01/13
Clerk: 1111              10:00:01am
-----
WIC Purchase

Card Num: XXXXXXXXXXXXX5678
WIC Merchant ID: XXXXXXXX
Settlement Date: 03/01
-----
1  GAL, LOWFAT MILK
   Item#: 022592007014    2.99
1  LB, CHEESE
   Item#: 041220345762    3.00 *
-----
WIC SUBTOTAL              5.99
(Coupons)                 -0.50
-----
WIC TOTAL                  5.49

TOTAL REQUESTED          6.59

ITEMS PURCHASE: 2

REMAINING WIC BENEFITS:

  3 GALLON MILK
  1 POUND CHEESE

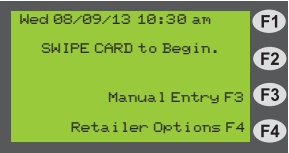
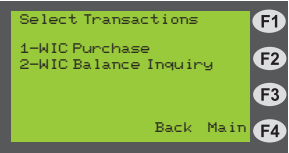
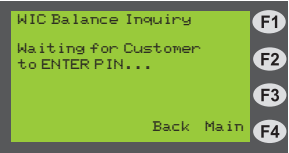
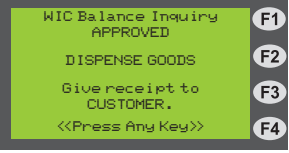
Use your Vermont WIC Benefits by:
  3/31/2013
-----
Result: Approved
Auth #: 007852
Trace #: 000092-00000738057636

DISPENSE GOODS
=====
```


WIC Balance Inquiry

Purpose

Allows a participant to get a printed receipt showing the balance in their WIC benefit account.

Terminal Screen	Action
	<p>Swipe Vermont WIC card or press Manual Entry [F3] to manually enter card number.</p> <p>NOTE: Card Numbers that are manually entered on a Balance Inquiry Terminal require a supervisor password.</p>
	<p>Select [2] WIC Balance Inquiry.</p>
	<p>Customer enters PIN on the PINpad and presses ENTER on PINpad.</p> <p>Screen will flash: Contacting Host...Waiting For Line... Dialing Primary...Waiting for Answer...</p>
	<p>Terminal will print WIC Balance Inquiry receipt.</p>

Balance Inquiry Receipt

ABC Market
Street 1
Anywhere, OK 12345
Ph: (123) 456-7890
Proc #: 1234567

Term#: T0000001 03/01/13
Clerk: 1111 10:00:01am

WIC Balance Inquiry

Card Num: XXXXXXXXXXXXX5678
WIC Merchant ID: XXXXXXXX
Settlement Date: 03/01

REMAINING WIC BENEFITS:

3 GALLON MILK
1 POUND CHEESE

Use your Vermont WIC Benefits by:
3/31/2013

Result: Approved
Auth #: 007852
Trace #: 000092-00000738057636

V2.99 020 138 000 000 000 000 000

=====

*** CUSTOMER COPY ***

XIV. Glossary

This glossary provides definitions for commonly used acronyms, terms and words used in WIC and in this manual.

ACH – Automated Clearing House – ACH is the mechanism used to electronically transfer funds to a Retailer’s bank account.

Authorization – The approval of retailer transactions by the WIC contractor online from their host computer.

Authorized Person – An adult WIC participant or a person who is authorized to shop for food benefits for a WIC participant, such as the participant’s mother or other caretaker.

Balance Inquiry – A non-financial transaction that allows an WIC cardholder to obtain the current balance of his/her WIC Food Benefits. Cardholders can also obtain their current food benefit balance by calling the toll-free number provided on the back of the Vermont WIC card, by visiting the Vermont Participant Portal, sign up for Vermont WIC text messaging or by performing a Balance Inquire transaction on the Retailer’s WIC POS equipment.

Business Day – All weekdays excluding those on which the Federal Reserve Bank is closed.

Buy One, Get One – A coupon or store promotion that enables a customer to receive a free item with the purchase of the same item.

Cardholder or Participant – An individual entitled to WIC benefits by the state agency.

Cashier ID – A 4-digit number that identifies each cashier uniquely to the WIC POS terminal. Also called a Clerk ID.

Cents-Off Coupon – A coupon that provides a designated cash discount off an item’s retail price.

Communications – The transmission of information between an WIC POS terminal and the host computer. Currently, dial up or highspeed broadband services are used for this transmission of information.

Contractor – In Vermont WIC processing, the contractor (Xerox State & Local Solutions, Inc.) selected by the state agency to perform the service.

CSR – Customer Service Representative; a person at the Participant or Retailer Help Desk responsible for taking calls and providing specific information and services related to the WIC process.

Vermont WIC

CVB – Cash Value Benefit. A fixed dollar amount of WIC benefits allowing WIC cardholder to obtain fruits and vegetables. The CVB may be used to purchase any fresh, canned or frozen fruits and vegetables which have not been excluded on the Vermont WIC Shopping Guide.

Display – The visible presentation of data on the WIC POS terminal or the small screen on your terminal that guides you through transactions with prompts and messages.

Food Prescription – The specific set of foods prescribed by the Vermont WIC Program for an individual WIC Participant for a specified period of time.

Host System – The Xerox mainframe computer that records all activity from WIC equipment installed at Retailer locations. The host system transmits approvals and/or denial messages back to the WIC equipment.

IVRU – Interactive Voice Response Unit – A computer that accepts data from touch-tone phones and responds with synthesized voice commands and information. Cardholders are trained to use the IVRU to obtain account balances.

Merchant/Processor ID – Unique number assigned to each retailer/merchant by the Vermont Department of Health WIC program.

Participant – An individual entitled to WIC Program benefits in a State's WIC program. It also refers to any duly authorized representative or agent for the participant. Also referred to as "cardholder".

Personal Identification Number (PIN) – Four-digit number used in conjunction with the Vermont WIC card to obtain WIC benefits. The PIN is considered an electronic signature – the cardholder's secret code.

PLU (Product Look Up) – A number used to identify individual fresh fruits and vegetables. For Vermont WIC transactions, the price for any WIC approved fresh fruits and vegetables should be assigned PLU 4469 when entered into the WIC POS device.

Proxy – A person, chosen by the WIC participant or head of household, to shop for WIC eligible foods on behalf of the household account.

Receipt – A paper record of a transaction.

Retailer – A store/merchant location that is authorized by the state agency to sell WIC foods and redeem WIC food benefits. Each unique location is considered to be a different Retailer, even if they are part of the same chain or owned by the same person.

Terminal ID – Unique number for each terminal in a Retailer location. This ID can be found on the terminal.


UPC (Universal Product Code) – A number and barcode that identifies an individual product.

Vermont WIC card – A plastic benefit card that is issued to eligible WIC cardholders to access WIC food benefits via WIC POS devices located at WIC certified Retailer outlets.

WIC – The USDA/Food and Nutrition Services Special Supplemental Nutritional Program for Women, Infants and Children.

WIC – Electronic Benefits Transfer – An electronic payment system that transfers WIC benefits values from the WIC program, to a WIC cardholder, and then to the WIC retailer.

WIC Equipment – This is the contractor-supplied POS equipment for use with WIC transactions. The equipment is prohibited from use for commercial credit and debit card sales.



WIC Retailer Help Desk
1-855-769-8857